



Exploded View

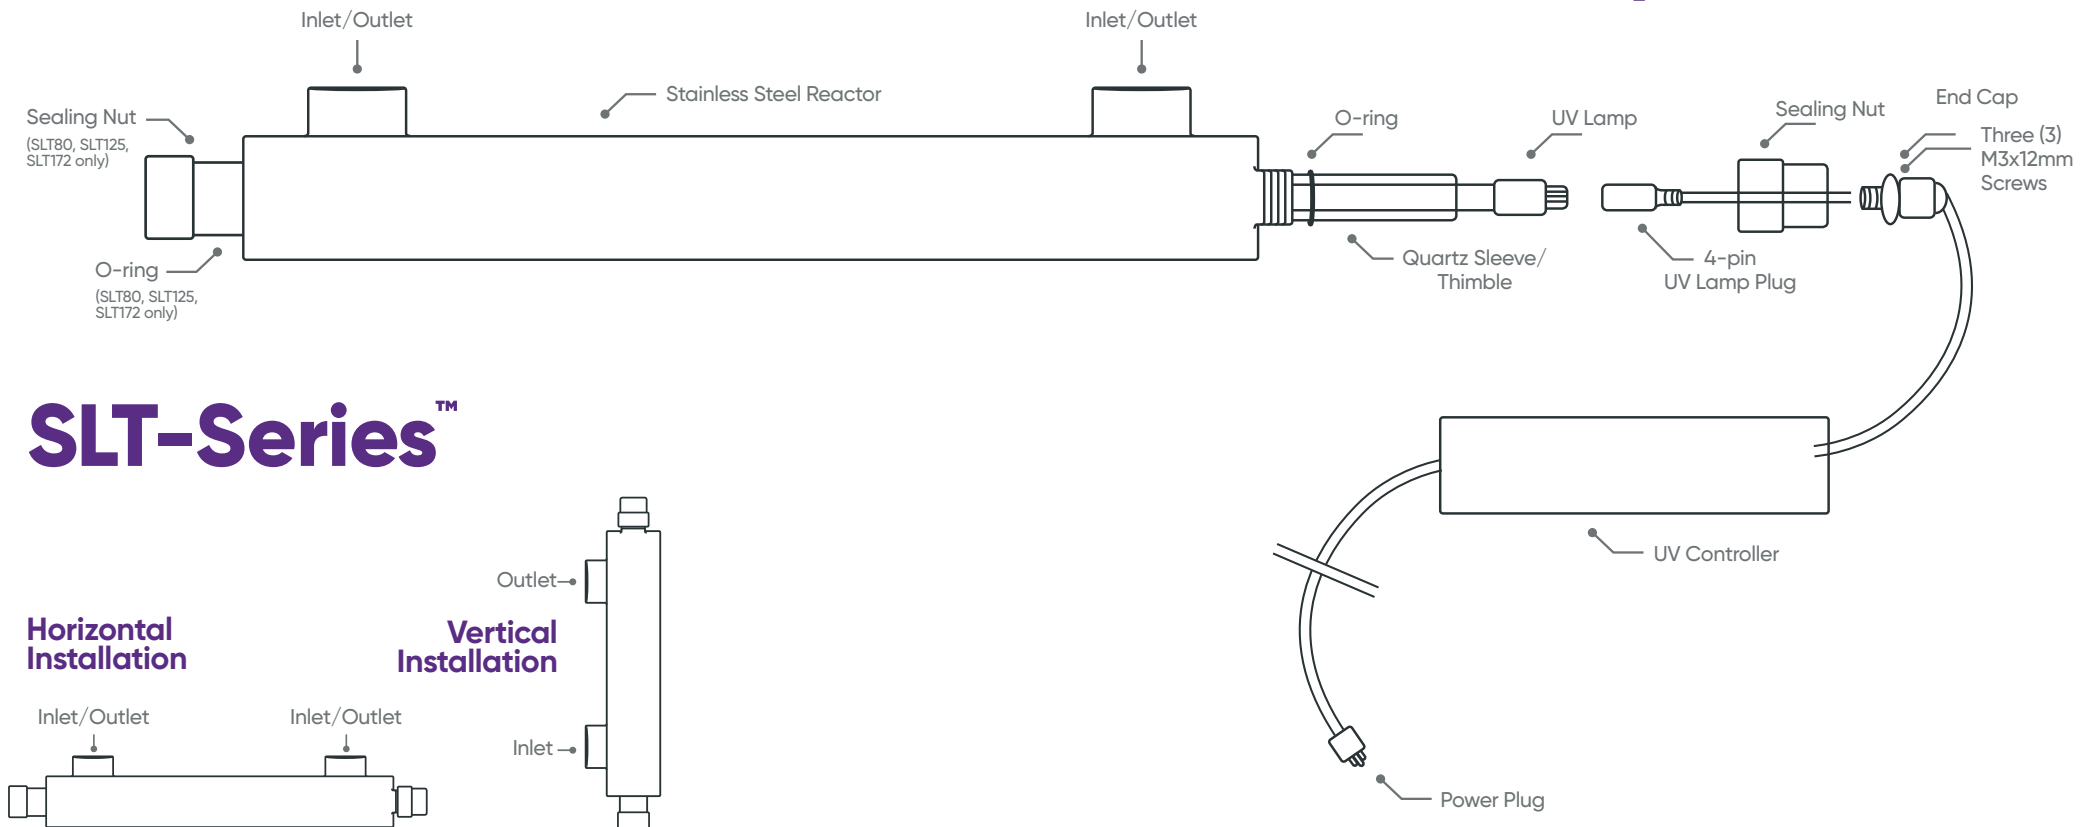

SLT-SeriesTM

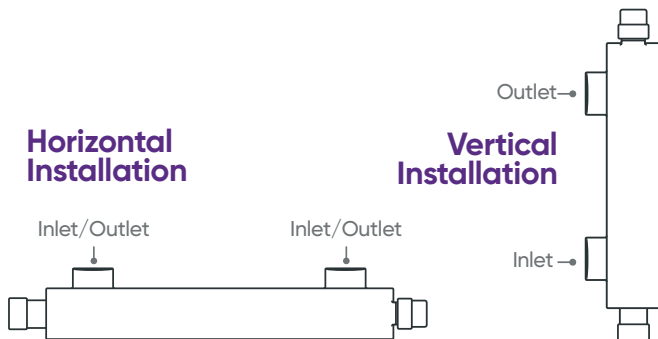

U Configuration

Outlet points should be facing upwards in horizontal installations, or the outlet should be the top port in vertical installations to prevent airlocks.